

# andrew James

## Hotdog Steamer



Please read the manual fully before using the appliance and keep the manual safe for future reference.

# Contents page

Safety guide	Page 3
Appliance specific safety instructions	Page 4
Appliance components diagram	Page 5
Assembling your hotdog steamer	Page 6
Using your hotdog steamer	Page 6
Cleaning the appliance	Page 7
Electrical information	Page 8
UK and EU Guarantee	Page 10
Disposal of the appliance	Page 11

## Safety guide

When using any electrical appliance, basic safety precautions should always be followed including:


- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years old.
- Always ensure the voltage on the rating label corresponds to the voltage in your home.
- Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by a qualified electrician or a service repair centre. If in doubt please contact our customer service team.
- The appliance is intended for domestic use only. Industrial or commercial use will void the warranty. The supplier cannot be held responsible for injury or damage if the appliance has been used for anything other than its intended use.
- Incorrect operation and use can damage the appliance and cause injury to the user.
- Do not use the appliance if it has been dropped or damaged in any way. If the unit has been damaged take the unit for examination and or repair by an authorised service agent.
- Do not immerse or expose the motor assembly, plug or the power cord in water or any other liquid for any reason.
- If the supply cord is damaged, it must be replaced by the manufacturer or by someone who is suitably qualified to avoid a potential hazard.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled or tripped over accidentally.
- Do not allow the cord to touch hot surfaces and do not place the cord near hot gas or electric burners or in a heated oven.
- Use of an extension cord with this appliance is not recommended. However if it is necessary to use an extension cord, ensure that the extension cord is equal to or greater than the power consumption of the appliance to avoid overheating of the appliance and extension cord. Do not use any other appliance on the extension cord. Do not place the extension cord in a position where it can be pulled on by children or animals or be tripped over.

- Always operate the appliance on a smooth, even and stable surface. Do not place the unit on a hot surface.
- Always remove the plug of the appliance safely. Do not pull on the appliances cord to remove the appliance plug from the electrical socket.
- Never handle or operate the appliance with wet hands.

### **Appliance specific safety instructions**

- Use oven mitts when opening the appliances lid, hotdog steam tray or when handling hot food or any hot parts of the appliance.
- During operation the appliance generates steam that can cause burns, scalding and serious injuries. Always apply extreme caution when using the appliance. Wear oven gloves and use oven tongs to remove hotdogs from the steamer.
- Do not move any appliance containing hot water or generating steam.
- Do not place you hotdog steamer under kitchen cabinets when operating as it generates steam that could damage your cabinets.
- It is normal to have residual water left over in the hotdog steamer when the appliance has been shut down. Never handle, move or disassemble the hot dog steamer when it is still hot. Always let the appliance cool down completely before handling, moving or disassembling the appliance.
- When the hotdog steamer is in operation, use extreme caution when lifting the lid. Always use oven mitts, making sure to keep the lid away from your hands and face. Keep the hotdog steam tray open to let excess hot water drip off back into the drip tray.

**Appliance components diagram**

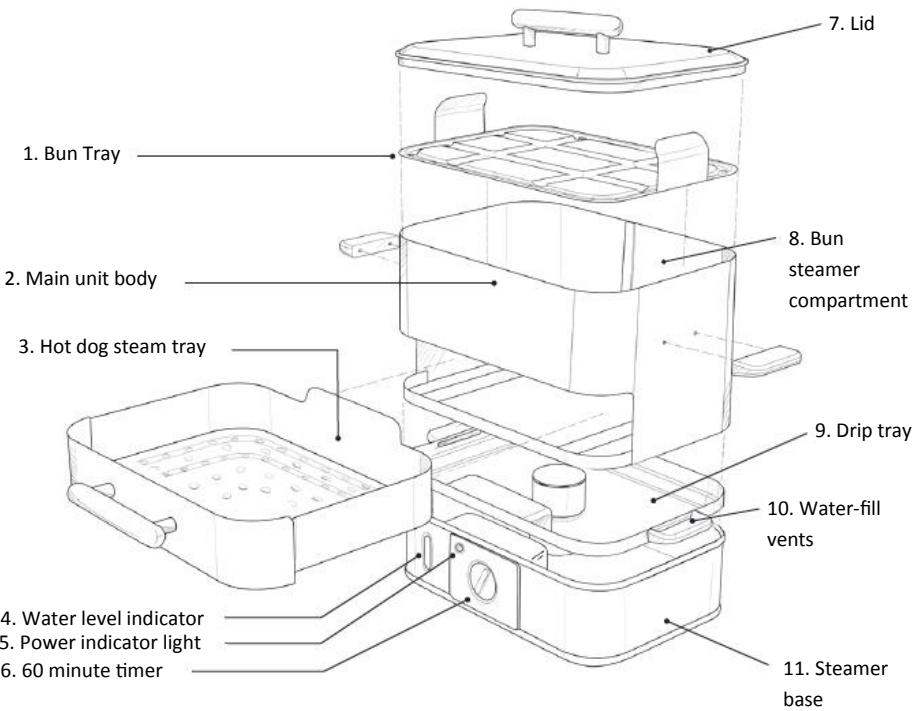

1. Bun tray	7. Lid
2. Main unit body	8. Bun steamer compartment
3. Hotdog steam tray	9. Drip tray
4. Water level indicator	10. Water-fill vents (left & right handle)
5. Power indicator light	11. Steamer base
6. 60 minute timer	

## **Assembling your hotdog steamer**

1. Fill the steamer base with cold tap water, making sure that the water level mark is above the minimum mark (MIN) and below the maximum mark (MAX).
2. Place the drip tray over the steamer base.
3. Attach the main unit body over the top of the shower base (ensure that the safety clip on the main unit body is locked into the base steamer). Do not lift the appliance by the side handles.
4. Insert the hotdog steamer tray in the main unit body by lifting it slightly upwards to enable the back stopper-tabs of the tray to fit it in place. The back stopper-tabs are a safety feature to block the hotdog steam tray from fully opening when taking out hotdogs from the tray.
5. Place the bun tray on top of the main unit body making sure that the side tray tabs are facing upwards.
6. The hotdog steamer tray can hold up to 12 hotdogs.
7. The bun steamer compartment can hold up to 12 buns at anyone time. DO NOT block the steam vents located in the corners of the bun tray. Ensure that the steam can fully circulate around the bun steamer compartment.

## **Using your hotdog steamer**

1. Plug the appliance into the electrical wall outlet.
2. Adjust the timer to the amount of hotdogs being cooked.
3. Once the cooking process has finished, ensure that the minute timer and the power indicator light are fully turned off.
4. Unplug the appliances cord from the electrical wall socket.
5. Open the bun steamer compartment lid. Remove the buns using tongs, always wear oven gloves and ensure that the steam does not come into contact with open skin.
6. Slide the hotdog steamer tray open by pulling it by the handle towards yourself (remember to always wear oven gloves).

7. Remove the hotdogs using tongs.
8. Assemble the hotdogs by carefully opening the buns and placing the hotdog inside of them.

**Note:**

- Always ensure that there is sufficient water in the steamer tray. If needed fill the steamer base through the water-fill vents located on the side handles of the drip tray (left or right side).
- Do not overfill the hotdog steam tray or the bun steam tray.
- Do not wrap anything around the buns before steaming them.
- Use only clean water in the steamer base.

**Cleaning the appliance**


- Always ensure that the appliance is unplugged from the electrical wall outlet.
- Empty the remaining water from the steamer tray.
- Do not submerge or wash the base of the appliance for any reasons.
- Wash the base of the appliance with a damp cloth and dry it thoroughly.
- You can wash the hotdog tray and the bun steamer tray in normal washing up liquid with warm water.
- Ensure that all parts of the appliance are dried thoroughly before storing the appliance.

## Electrical Information

### Please note:

It is extremely important that the wires or cores in the flex are connected to the correct terminals in the plug. If the colour of the mains lead of the appliance does not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

- The **Live (Brown)** wire connects to the right-most live (L) terminal nearest to the fuse.
- The **Neutral (Blue)** wire connects to the left-most neutral (N) terminal.
- The **Earth (Green and Yellow)** wire connects to the central, top most earthed (E) terminal.

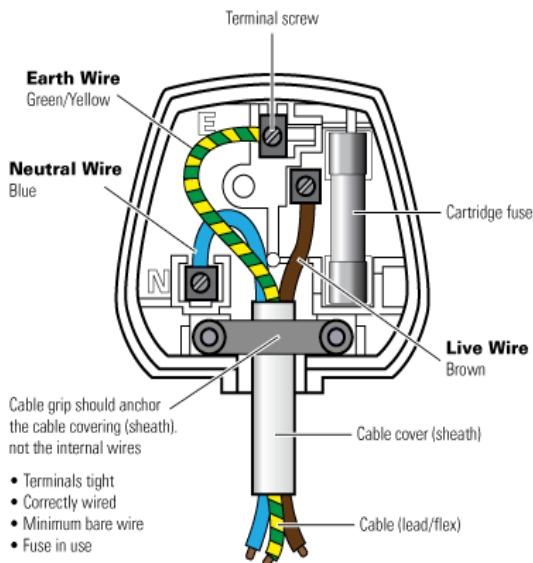

### Warning:

If the appliance is double insulated, indicated by the double insulated symbol:



it should not have an earth wire or earth connection.

### Plug

The plug must be protected by the correct AMP fuse; this will be indicated on the case of the plug. Only BSI or ASTA approved fuses should be used. When changing the fuse always replace it with a fuse that is of the same identical rating as the original. If you are unsure about which plug or fuse to use, always refer to a qualified electrician.

Please note after replacing the fuse, ensure that the cover is correctly fitted back onto the plug. Never attempt to run the appliance if the plug does not have a cover. If a moulded plug is fitted and has to be removed take great care in disposing of the



plug and severed cable, it must be destroyed to prevent it from engaging into a socket. If the supply cord is damaged it must be replaced by a service agent or a similarly qualified person in order to avoid a hazard.

All of our electrical appliances conform to pre-existing EC Directives 2006/95/EC (Low Voltage Directive) and 2004/108/EC (EMC Directives).

For further information please visit <http://www.esc.org.uk/industry/product-safety/product-testing-screening/kitchen-appliances/>

## **UK and EU Guarantee**

Your new Andrew James product comes with a 24 month guarantee and a 2 year fixed warranty, effective from receipt confirmation. Your receipt or order number is required as proof of purchase date so it is imperative that you keep it safe. This guarantee only applies if the item has been used solely for the use intended, and all instructions have been followed accordingly. Please note this product is only for domestic use only and is not for commercial use.

Abuse of your product will invalidate the guarantee. Returned goods can only be accepted if repackaged properly within the original colour product box, and presented with the original receipt of sale/order number. This does not affect your statutory rights.

Returned products must be cleaned and returned to us in as close to delivery condition as possible.

If your product develops a problem within the first 12 months of the fixed warranty, we will pay all shipping costs to have it returned to us. After 12 months the customer will be liable for the cost of returning the product to us. We will then pay to have the repaired/replaced item shipped back to the customer.

If you wish to return your item for a full refund, you have the right to do so within the first 7 days. For our returns policy please go to

[www.andrewjamesworldwide.com](http://www.andrewjamesworldwide.com)

Customers are responsible for any taxes applied to our products when they are shipped outside of the EU.

All of our prices are inclusive of VAT.

Once a product has been returned to us, we will aim to repair or replace it within 30 days of receipt.

The guarantee does not cover any defect arising from improper use, damage, build-up of lime scale or repair attempts made by third-parties. Also, the guarantee does not cover normal wear and tear of individual parts.

## Disposal of the appliance

Please note that this Andrew James product is marked with this Symbol:



This means that this product must not be disposed of together with ordinary household waste, as electrical and electronic waste must be disposed of separately.

In accordance with the WEEE directive, every member state must ensure correct collection, recovery, handling and recycling of electrical and electronic waste. Private households in the E.U. can take used equipment to special recycling stations free of charge. In certain member states used apparatus can be returned to the dealer where they were bought on the condition you buy new products. Contact your retailer, distributor or the municipal authorities for further information on what you should do with electrical and electronic waste.

We reserve the right to amend the specification as part of our policy of continual product improvements. All sizes, weights, dimensions, temperatures, times, consumption figures are approximate only.

**Contact details**

Andrew James UK LTD

Unit 1

P C Henderson Premises

Bowburn North Industrial Estate

Bowburn

Co Durham

DH6 5NG

Customer Service / Technical Support- Telephone 0844 335 8464

(Monday – Friday 9am -9pm)

(Saturday – 9am -5pm)

(Sunday – 10am -4pm)

Customer Service/ Technical Support Email:

[customerservices@andrewjamesworldwide.com](mailto:customerservices@andrewjamesworldwide.com)

Website: [www.andrewjamesworldwide.com](http://www.andrewjamesworldwide.com)

Copyright Andrew James